

[www.fishman.com](http://www.fishman.com)

***FISHMAN***

**USER GUIDE**  
**Aura Image Casting Preamp**

# Welcome

---

Thank you for making Fishman a part of your acoustic experience. We are proud to offer you the finest acoustic amplification products available; high-quality professional-grade tools which empower you to sound your very best. We are confident the Aura Image Casting preamp will both enhance and inspire your music making.

## Quick Start

---


Before you begin, set the controls as shown:

**Plug in** • Use a ¼-inch instrument cable.

**Raise the Volume** • Use the Volume control to set a desirable output level.

**Select an Image** • Use the Image switch to browse the Images created for this instrument. Each Image is blended with the pickup to produce an optimum tone.

**Adjust Tone** • Turning the Tone control counter-clockwise reduces the amount of treble in your sound.

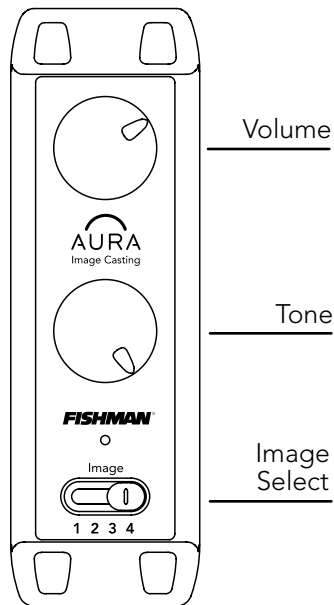

## Power

---

Plug in the guitar, and the preamp switches on. To conserve the battery, remove the instrument cable from the guitar when the system is not in use. The LED under the control panel will flash once at power-up to tell you the preamp is on.

## Low Battery Indicator

---

When the low battery LED comes on, you have approximately 1.5 hours before the battery is exhausted.

***FISHMAN***

[www.fishman.com](http://www.fishman.com)