

[www.fishman.com](http://www.fishman.com)

 
***FISHMAN***

**USER GUIDE  
CLÁSICA BLEND ONBOARD PREAMP**

# Clásica Blend Quick Start

---

- 1. Set the controls** • Set **volume**, **mic blend** and **notch** off. Set the **bass**, **middle** and **treble** controls to center.
- 2. Plug in** • Connect the Clásica Blend to your amplifier or PA with a ¼-inch instrument cable. The battery light (**batt**) will flash once quickly to indicate it has switched on.
- 3. Turn up** • Raise the **volume** and adjust the **bass**, **middle** and **treble** controls to your liking.
- 4. Mix in the mic** • Raise the **mic blend** to mix in the onboard microphone.

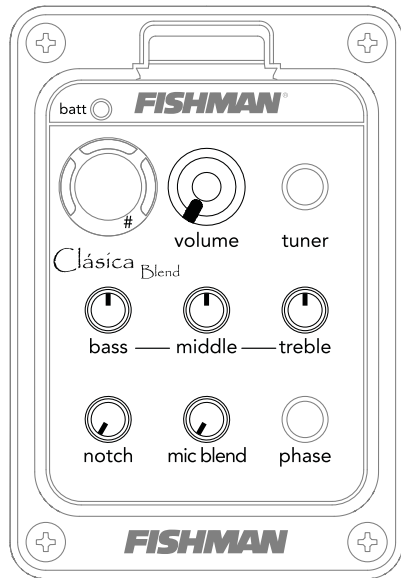

# Clásica Blend Controls

---

**Volume** • For the cleanest signal, set the **volume** knob as high as possible, without causing distortion or feedback.

**Bass** • Boost here to add depth and weight to the sound of the guitar.

**Middle** • Turn the **middle** knob all the way left for a smooth “scooped out” tone at high volume levels. Raise the **middle** knob to the right of center to add midrange “bite” to the sound.

**Treble** • Boost to cut through the mix. Cut to mellow and subdue the sound.

**Notch** • Tune the **notch** filter to remove low-end feedback. Raise the **volume** until feedback occurs, then slowly turn the **notch** to the right until the feedback is eliminated.

**Phase** • Use the **phase** switch to improve bass response at low volume and suppress feedback at high volume.

**Mic Blend** • This control determines the balance between the internal microphone and your pickup signal. Turn the control left of center for more pickup or right of center for more microphone, enhancing the natural sound of your pickup output. At high volume levels, mix in less microphone to prevent feedback.

**Mic Trim** • A dedicated microphone volume is located on the side of the preamp body. Set the **mic blend** knob to the center position and adjust the **mic trim** with a small slotted screwdriver until the microphone and pickup levels are balanced to your liking.

**Tuner** • Use the tuner lights as shown below to tune your instrument.



"A" note  
below pitch



"A" note  
in tune



"A" note  
above pitch



"A#" note  
in tune

 
**Battery** • When the **batt** indicator lights steadily it is time to change the battery. To conserve power, unplug the instrument and turn off the tuner when not in use. Replace the battery by flipping open the preamp body using the latch located above the Fishman logo. Be sure to observe the correct polarity during this installation.

# Sample EQ Settings

---


## Fingerstyle

This will add fullness to the bass and definition to the treble.

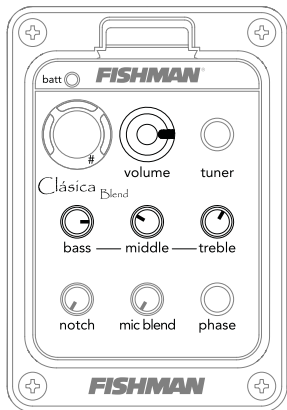


## “Scooped” Mid

 This setting emphasizes extreme bass and treble

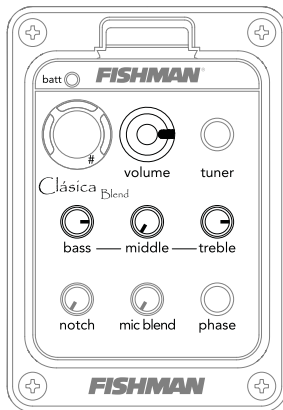


## Strummer

 A good setting for strumming chords.

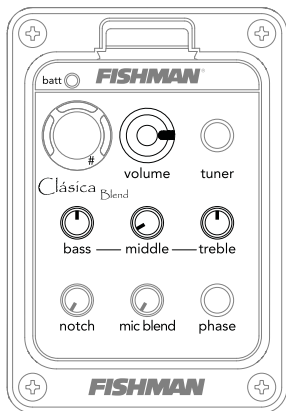

## Cut Through the Mix

 When you need to be heard through a loud band.

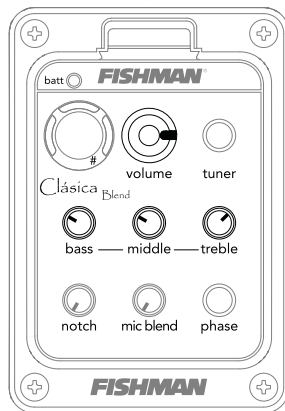

***FISHMAN***

[www.fishman.com](http://www.fishman.com)