FISHMAN FLUENCE Regulator/Charger Classic Humbucker Set Battery Master Volume Neck Tone - Pull for Neck Voice 3 Bridge Tone - Pull for Bridge Voice 2 Output Jack Ring (-) (+) Sleeve Bridge Ground FLUENCI. FLUENC lassic Bri <mark>v</mark>ge Tip sco sco 📄 le Coil Mode Se ect gle Coil Mode 00 Bridge Neck o o 00 Tone Tone Pull Pull Voice-2 Voice-3 Volume 25k 25k 25k "224" "224" 09 Neck Wire Bridge Wire Neck Pickup -Both Bridge Pickup

Pickup Selector 3-Position