

FISHMAN FLUENCE™


Classic Humbucker Set Rev6 - Standard Volume Control Wiring (Pot Wipers are Out)

Neck Volume: Pull for Neck Phase Invert

Bridge Volume

Neck Tone: Pull for Voice-3 Single Coil Mode Bridge/Neck

Bridge Tone: Pull for Voice-2 Bridge/Neck

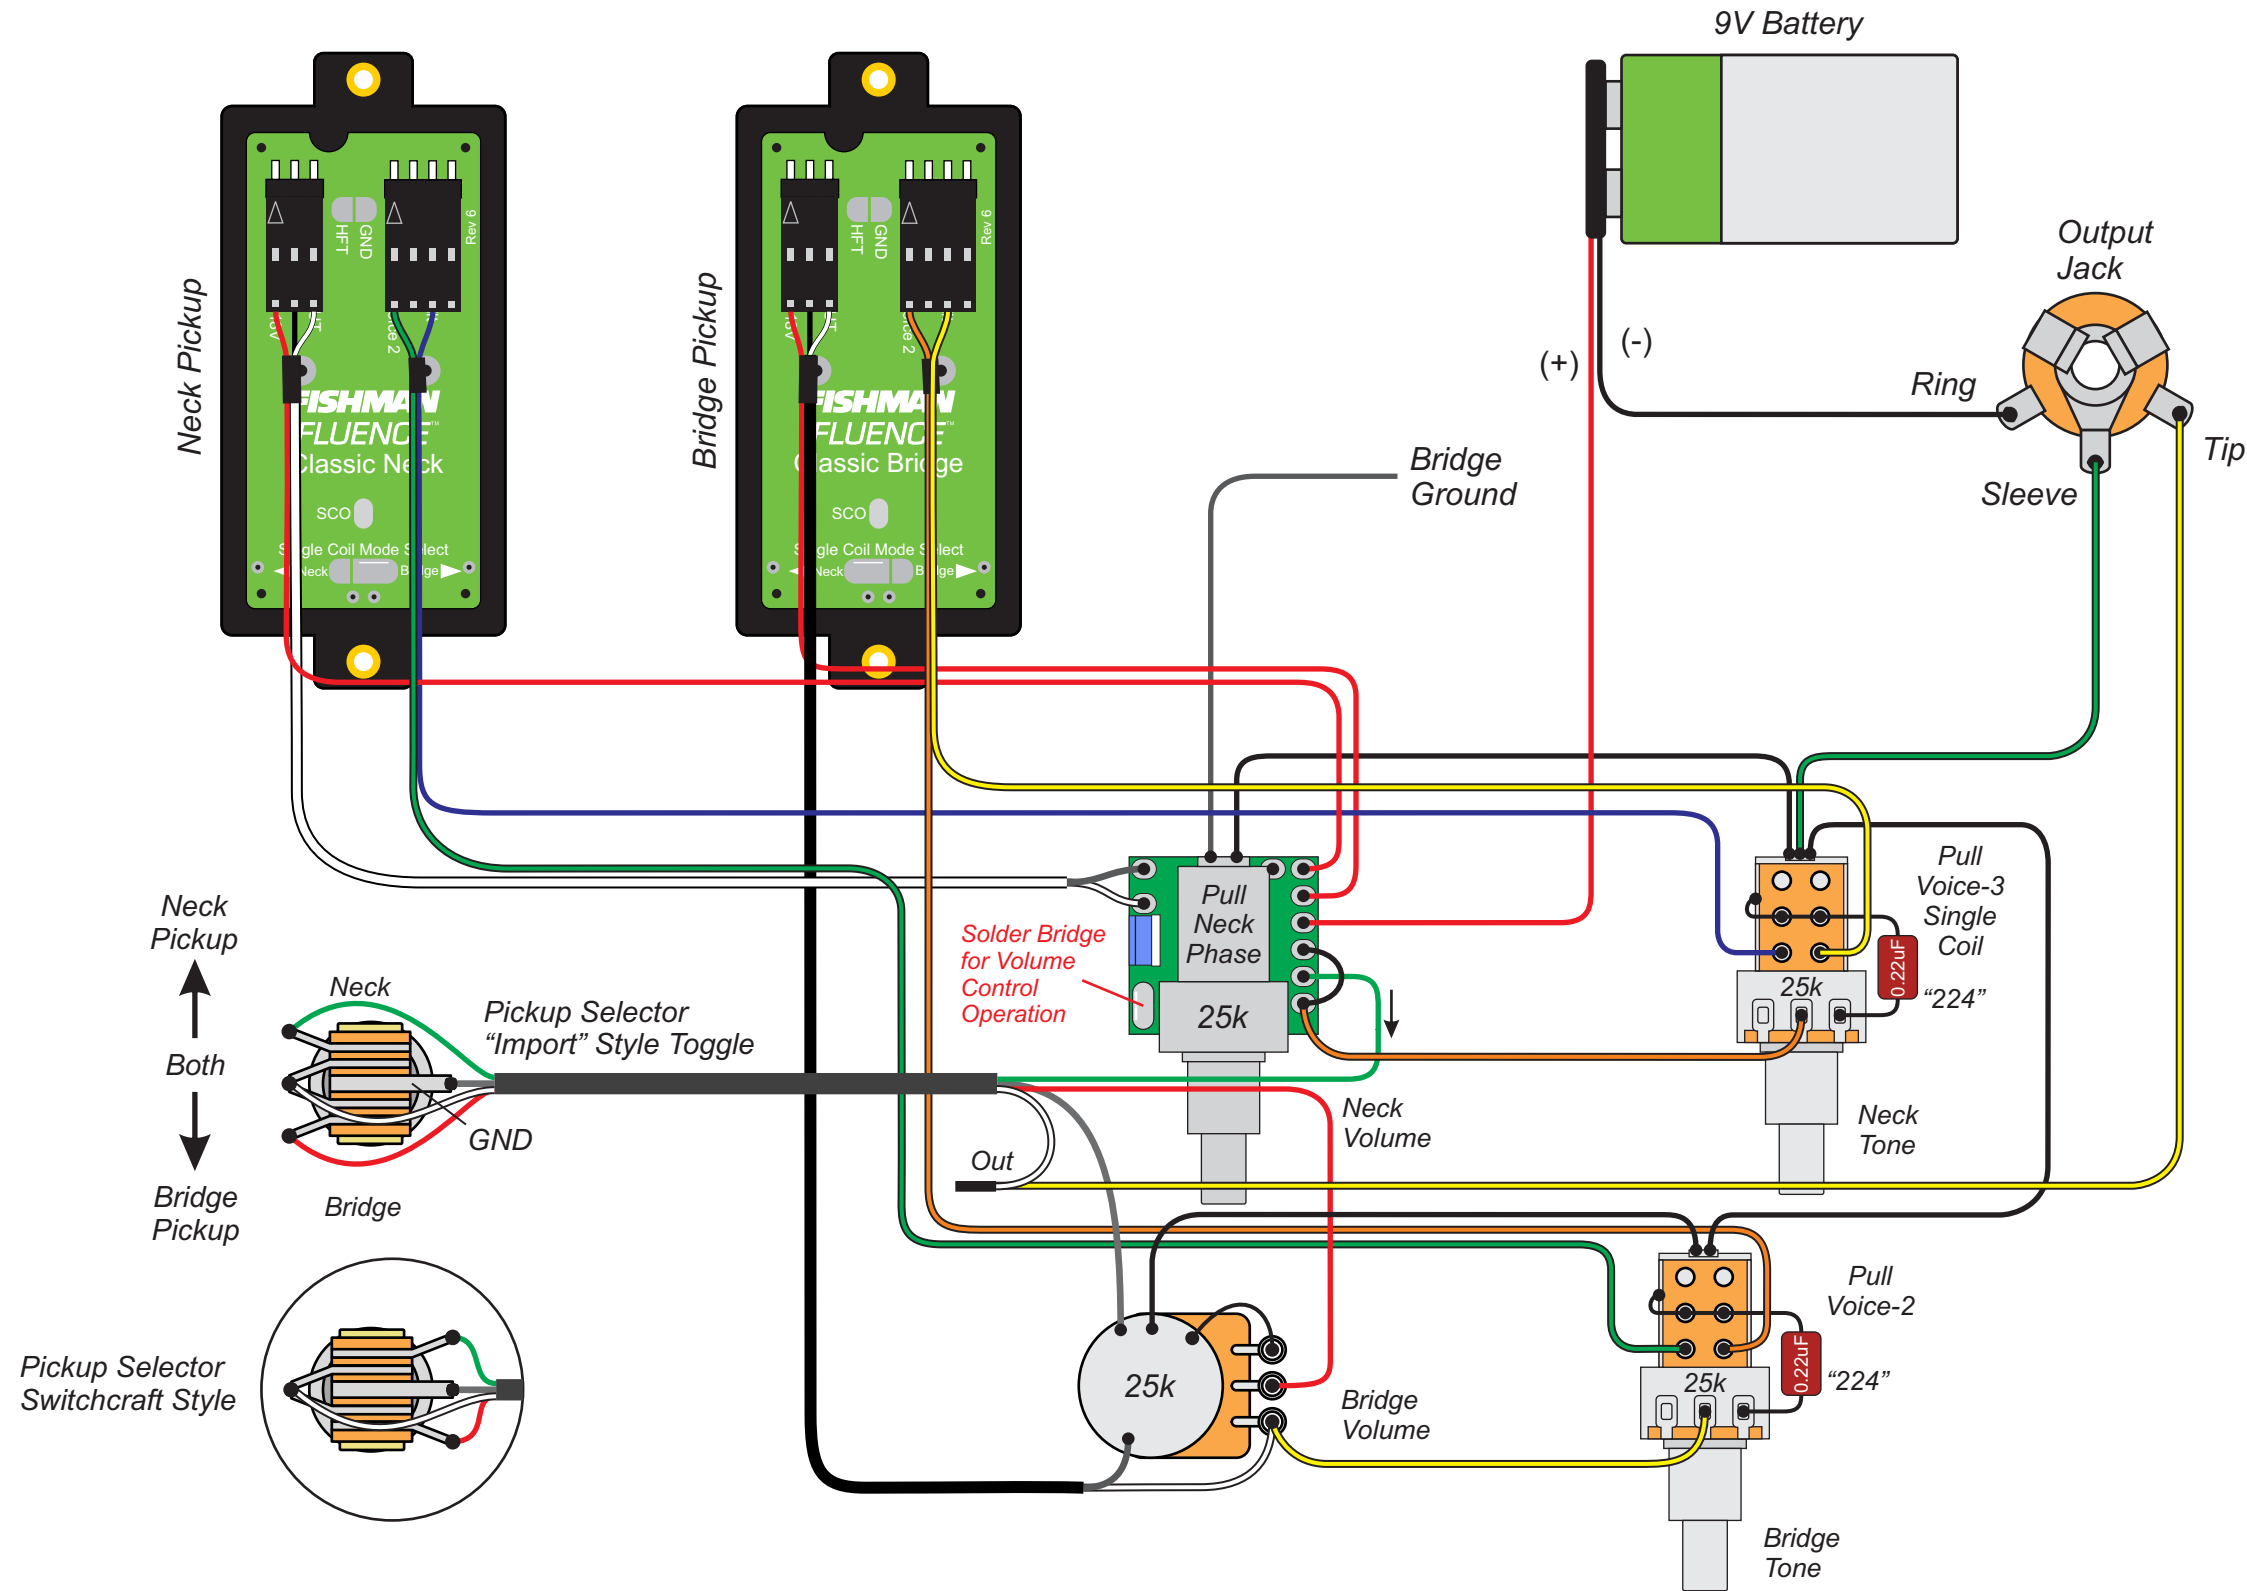

Phase Inverter Details

Phase Invert Trim Control
Adjusts the level of the pickup when phase inversion is activated to fine tune the blend for optimal tone.
Adjustment range: -2dB to +3dB
For 2xVolume setups where the blend is externally controllable, set trim at 0dB mid position as shown.

