

FISHMAN FLUENCE™

Classic Humbucker Set Rev6 - Standard Volume Control Wiring (Pot Wipers Out)


Neck Volume: Pull for Neck Phase Invert

Bridge Volume

Neck Tone: Pull for Voice-3 Single Coil Mode Bridge/Neck

Bridge Tone: Pull for Voice-2 Bridge/Neck

Rechargeable Battery Pack

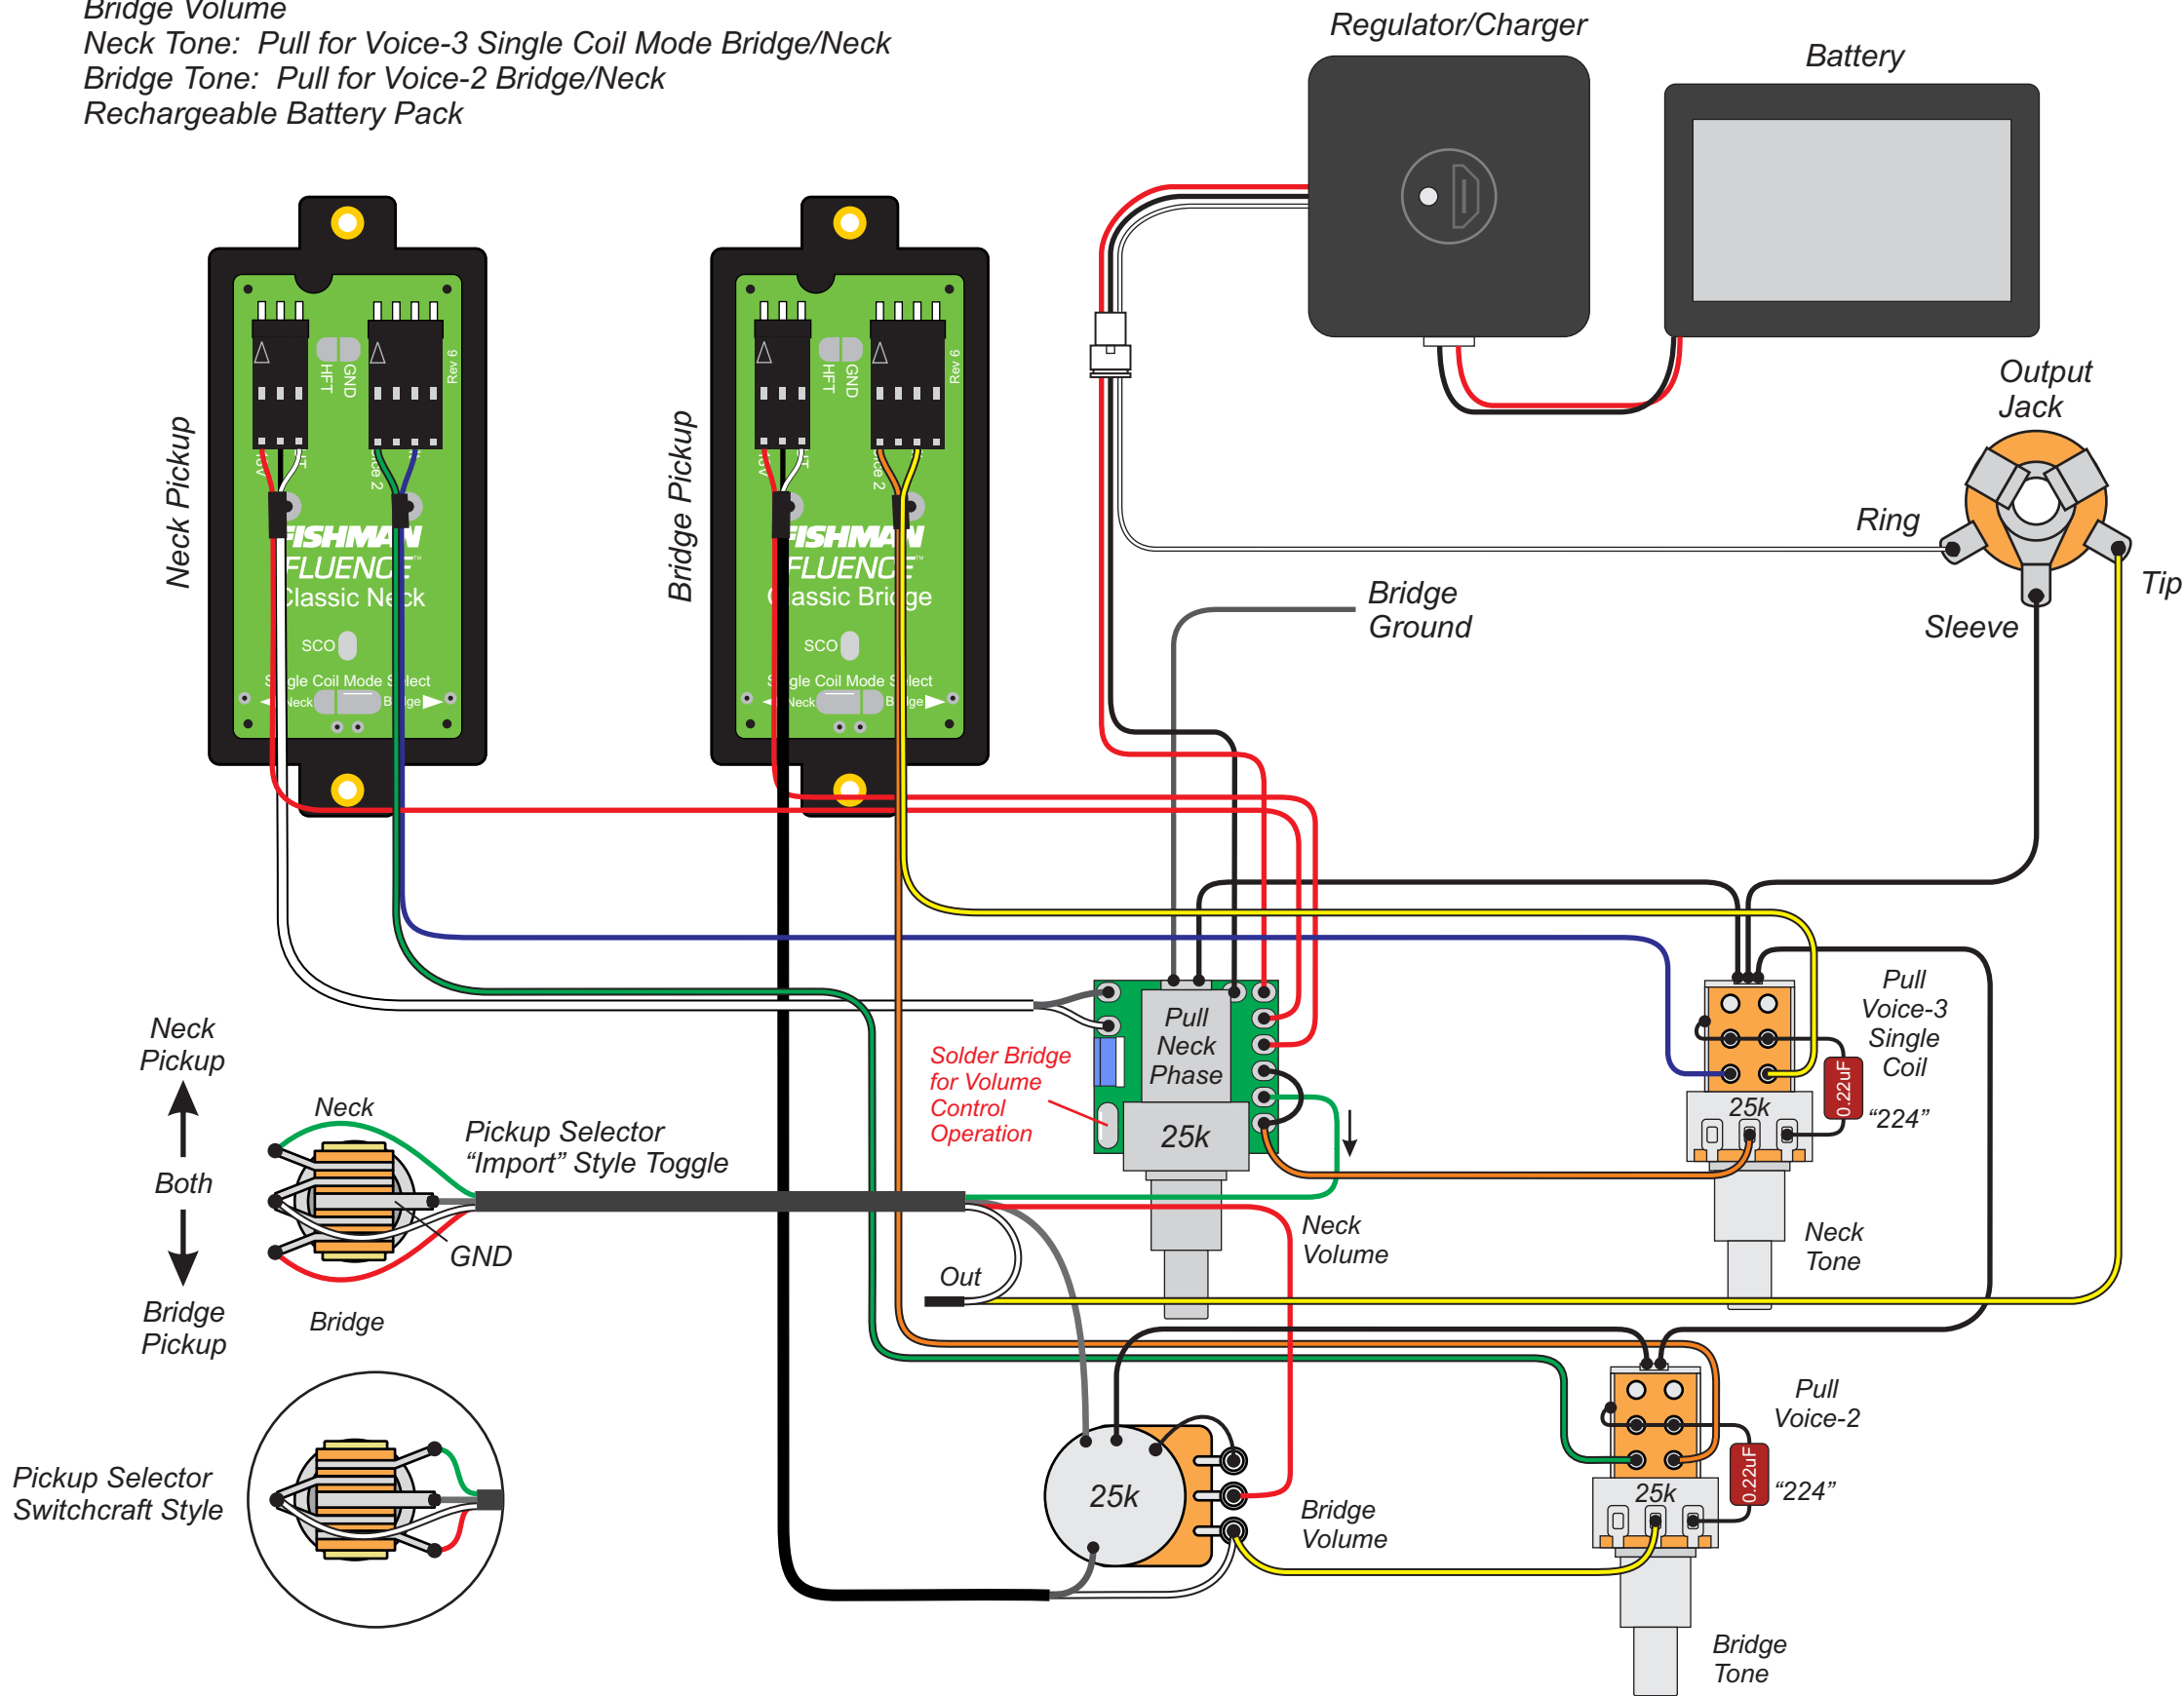

Phase Inverter Details

Phase Invert Trim Control
Adjusts the level of the pickup when phase inversion is activated to fine tune the blend for optimal tone.
Adjustment range: -2dB to +3dB
For 2xVolume setups where the blend is externally controllable, set trim at 0dB mid position as shown.

