Custom Series Matt Heafy Set Wiring

Standard wiring with dual voice switching.

Pot Controls:

1. Neck Volume 2. Neck Tone (Pull for Voice 2) 3. Bridge Volume

4. Bridge Tone (Pull for Voice 3)

Voice 1 Alnico – Modern Active (voicing switch open position) 6 String Peak frequency – 650Hz 7 8 9 String Peak frequency – 630 Hz

Voice 1 Ceramic – Modern Active (voicing switch open position) 6 String Peak frequency – 630Hz 7 8 9 String Peak frequency – 730Hz

Voice 2 Alnico – Crisp, clean and fluid (voicing switch grounded position) 6 String Peak frequency – 420Hz / 8 kHz 7 8 9 String Peak frequency – 420Hz / 8 kHz

Voice 2 Ceramic – Modern passive attack (voicing switch grounded position) 6 String Peak frequency – 1.8 kHz 7 8 9 String Peak frequency – 1.8 kHz

Voice 3 Alnico (Single Coil) - Glassy, Scooped, Hi-fi

6 String Peak frequency - 4.7 kHz 7 8 9 String Peak frequency - 4.7 kHz

Voice 3 Ceramic (Single Coil) - Cutting, overwound single coil

6 String Peak frequency - 4.5 kHz 7 8 9 String Peak frequency - 4.5 kHz

FISHMAN FLUENCE[®] Custom Series Matt Heafy Set and

Modern Humbucker Set - 6,7,8,& 9-String (6-String set shown)

Bridge Volume

Neck Volume: Pull for Voice-3 (Single Coil) Bridge & Neck Tone: Pull for Voice-2 Bridge & Neck



9V Batterv