

Standard wiring with dual voice switching.

1. Neck Volume
2. Neck Tone (Pull for Voice 2)
3. Bridge Volume
4. Bridge Tone (Pull for Voice 3)

(voicing switch open position)

6 String Peak frequency – 650Hz

7 8 9 String Peak frequency – 630 Hz

(voicing switch open position)

6 String Peak frequency – 630Hz

7 8 9 String Peak frequency – 730Hz

(voicing switch grounded position)

6 String Peak frequency – 420Hz / 8 kHz

7 8 9 String Peak frequency – 420Hz / 8 kHz

(voicing switch grounded position)

6 String Peak frequency – 1.8 kHz

7 8 9 String Peak frequency – 1.8 kHz

Scooped, Hi-fi

6 String Peak frequency - 4.7 kHz

7 8 9 String Peak frequency - 4.7 kHz

6 String Peak frequency - 4.5 kHz

7 8 9 String Peak frequency - 4 5

7.6 / String Peak frequency 1.0 kHz

**Custom Series Matt Heafy Set and
Modern Humbucker Set - 6,7,8,& 9-String (6-String set shown)**

Neck Volume

Bridge Volume: Pull for Voice-3 (Single Coil) Bridge & Neck

Tone: Pull for Voice-2 Bridge & Neck

