


How to add a Rare Earth Single Coil or Humbucking model to an undersaddle pickup with onboard preamp (T-R-S)

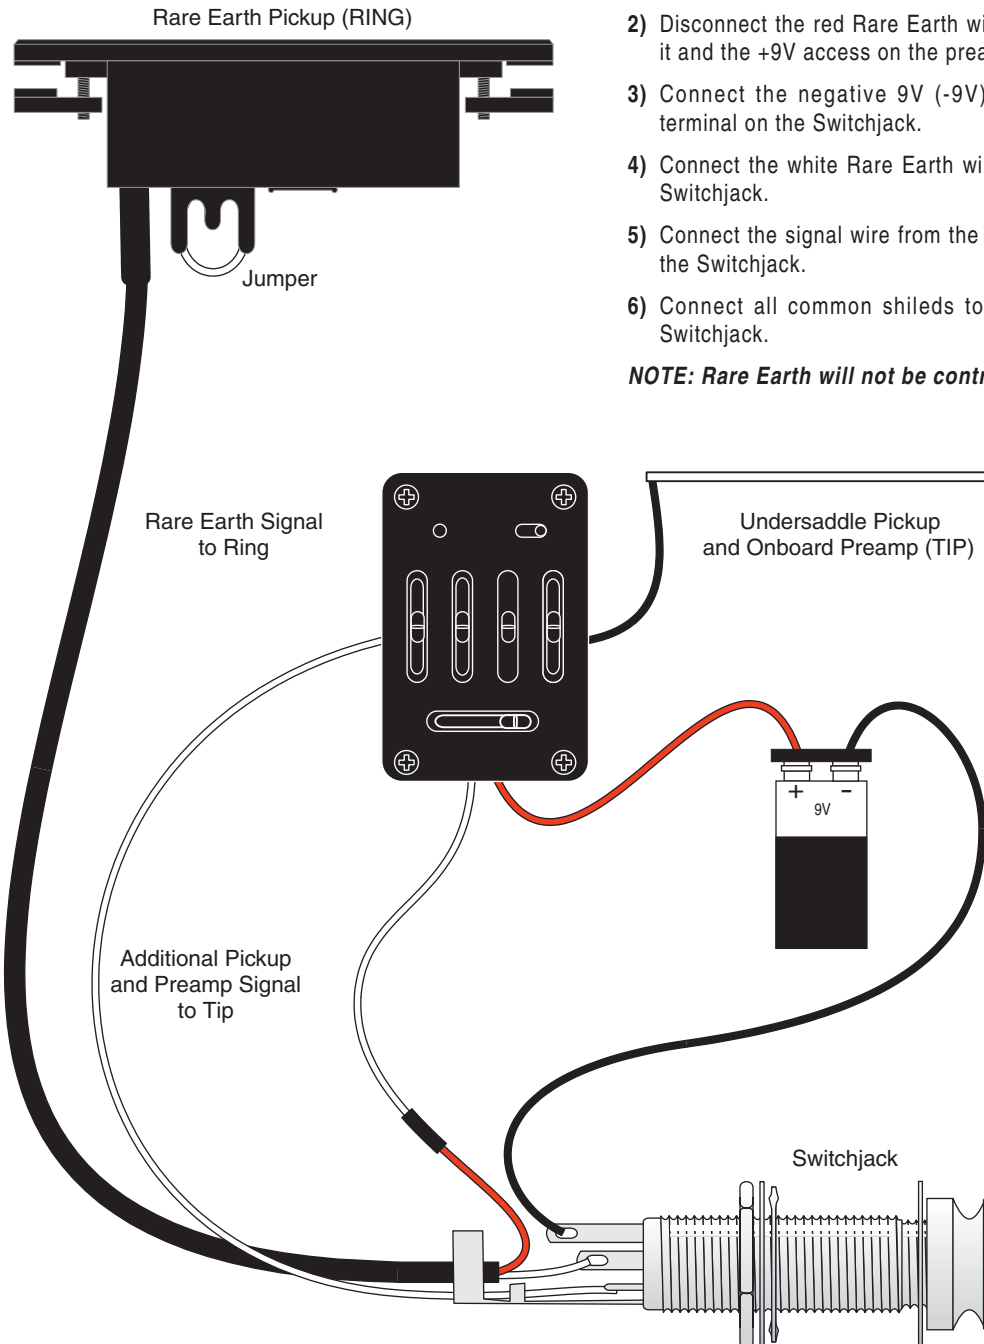

- 1) Remove Rare Earth battery and connect the battery contacts with a jumper.
- 2) Disconnect the red Rare Earth wire and splice a wire between it and the +9V access on the preamp.
- 3) Connect the negative 9V (-9V) battery wire to the switch terminal on the Switchjack.
- 4) Connect the white Rare Earth wire to the ring terminal on the Switchjack.
- 5) Connect the signal wire from the preamp to the tip terminal on the Switchjack.
- 6) Connect all common shields to the sleeve terminal on the Switchjack.

NOTE: Rare Earth will not be controlled by Onboard Preamp.