
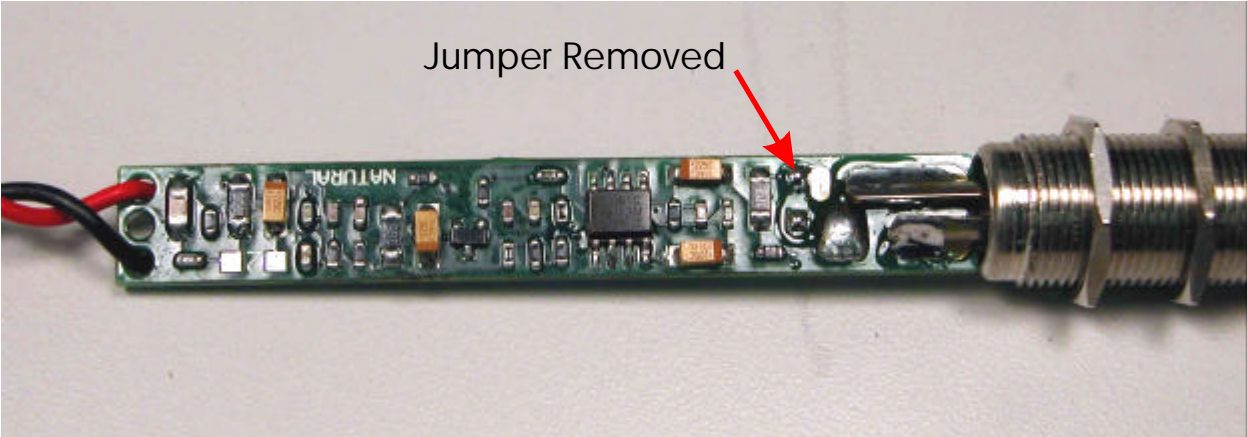


Fishman Transducers, Inc.
Natural-1 and Natural-2 Rev6
Wiring Instructions for Volume Control

10/01/07
JE

Step 1 - Circuit Board Prep / Jumper Removal

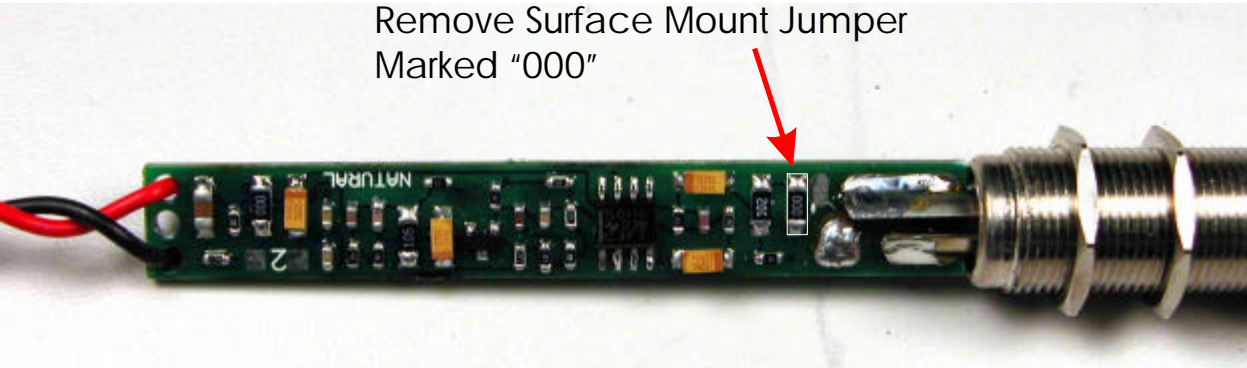

Step 2 - Wiring

Potentiometer:

Resistance: 10k to 25k

Taper: A (Log Taper) Recommended

Resistor: 1k, 1/4 watt

Recommended but optional.
(Helps reduce radio pickup in some amplifiers when volume in off position.)

