



Step 1: Endpin Jack Installation

Widen the endpin hole to $\frac{15}{32}$ " (11.9mm) to accommodate the endpin output jack. [Refer to Endpin Jack installation guide for further details.](#)

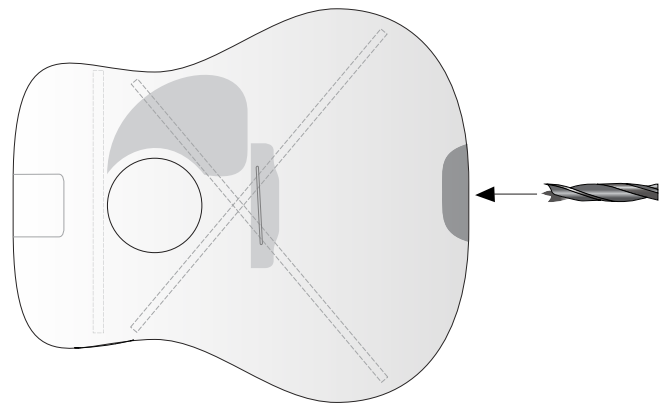


Step 2: Sonicore Pickup Installation

Drill a $\frac{3}{32}$ " hole (2.4mm) in the saddle slot for the pickup wire, no less than $\frac{1}{10}$ " (2.5mm) from nearest string. [Refer to Sonicore installation guide for further details.](#)

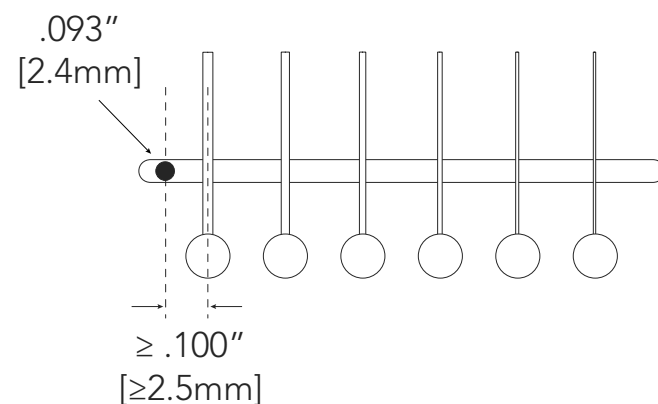

Step 3: Preamp Location

Position the preamp on the flat-test convenient surface on the side of the instrument that also allows internal clearance. Cut out cavity for preamp using supplied template.

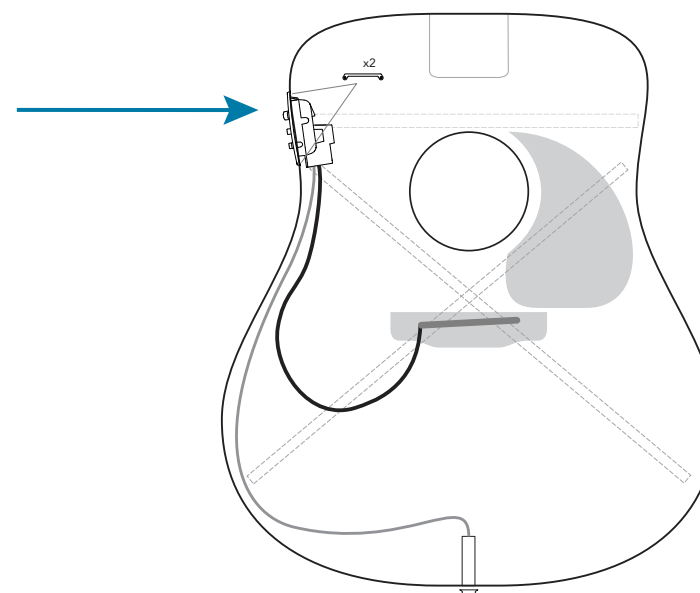

Step 4: Attach Preamp

Attach the preamp to the guitar using the supplied screws and mounting brackets.

